

Command line interface

You can access the Raspberry Pi command line interface (CLI or Terminal) in three different way.

× The default credentials for the pi user in the d-diot image are:

username: **pi**

password: **d-diot.com**

1. Keyboard and monitor

Simply connect an usb keyboard to your Raspberry Pi and run an HDMI cable from the Raspberry Pi port to a suitable monitor or TV, and you are done.

2. Shellinabox

Shellinabox put a CLI in a web interface and with the default d-diot image you can access them directly from the [Home Assistance webui](#).

You can access shellinabox also from the following URL:

- <https://d-diot.local:4200>

If your network don't support avahi / zeroconf use the following URL:

- https://YOUR_IP_ADDRESS:4200

3. ssh connection

If you are on a linux machine simply open a terminal and type:

```
user@host:~$ ssh pi@d-diot.local
```

or if your network don't support avahi / zeroconf

```
user@host:~$ ssh pi@YOUR_IP_ADDRESS
```

If you are on a Windows machine you need to install an ssh client like [PuTTY](#).

From:
<https://wiki.d-diot.com/> - **d-diot wiki**

Permanent link:
https://wiki.d-diot.com/system_administration/common_operation/command_line_interface

Last update: **2019/04/05 19:24**



